

How to save a full screen picture of the SHS display?


July 16, 2018

The SHS800 and SHS1000 series can save exact copies of the display images to an external USB memory device, but the normal save process can “cut off” the bottom.

The Normal Picture/Image Save Process:

- Insert compatible USB memory device into the scope
- Press Save/Recall
- Set Type = Picture
- Press Save



This will save an image similar to this:

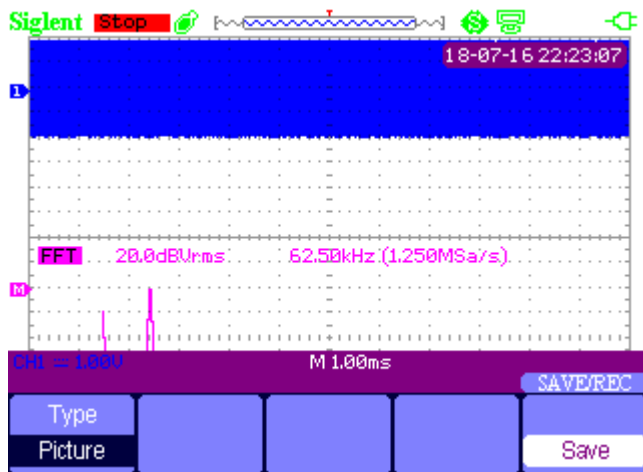

As you can see, the menu is blocking a fair portion of the display.

There is another method of saving the full screen.

- Insert compatible USB memory device into the scope
- Press and hold the Save/Recall button for 5 seconds (maybe a little longer)
- There will be a progress indicator on the display

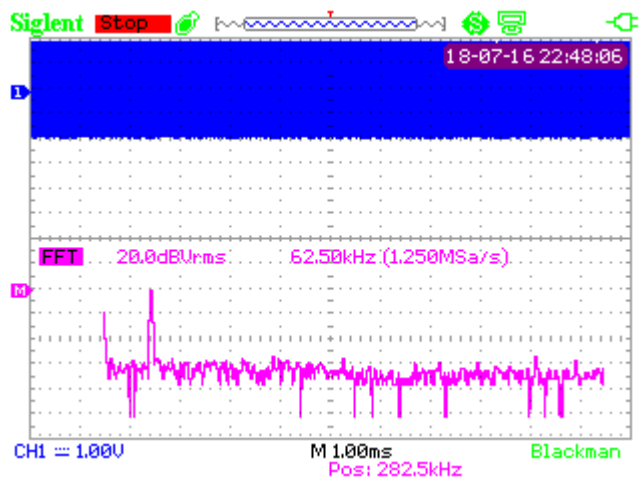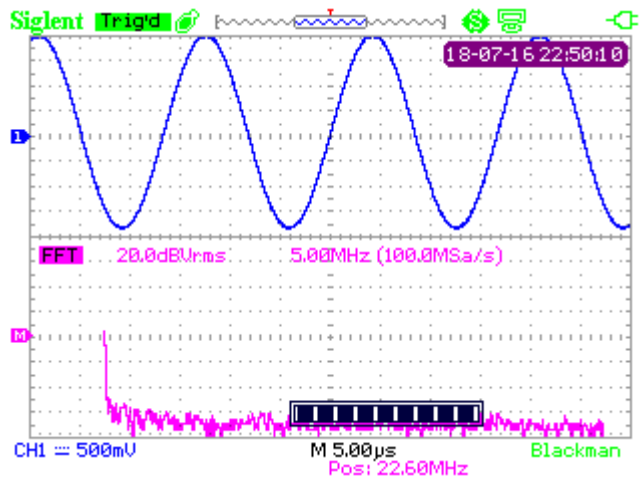



North American Headquarters

SIGLENT Technologies NA
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free: 877-515-5551
Fax: 440-399-1211
info@siglent.com
www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES GERMANY GmbH
Liebigstrasse 2-20, Gebaeude 14,
22113 Hamburg Germany
Tel: +49(0)40-819-95946
Fax: +49(0)40-819-95947
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel: + 86 755 3661 5186
Fax: + 86 755 3359 1582
sales@siglent.com
www.siglent.com/ens